


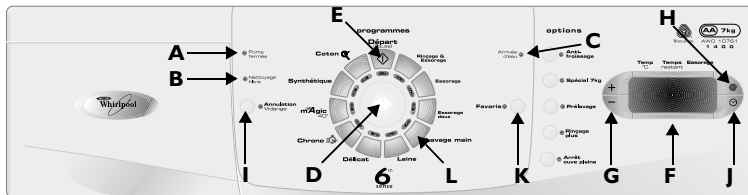

A. "Door locked" indication -
When the blue lamp lights up, the door cannot be opened -

 
This washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately:

B. "Clean filter" indication
C. "Water tap closed" indication



6th Sense intelligent technology always guarantees perfect results with maximum efficiency whatever the wash load.

- D. "On/Off" button
- E. "Start/Pause" button
- F. Display
- G. Temperature selection buttons +/-
- H. Spin speed selection button
- I. "Reset/Drain" button
- J. "Start delay" button
- K. "Favourites" button
- L. Programme selection button



Main programmes	Care Labels	Type of wash/Notes	Max Load kg	Detergents and additives			Special options					Max Spin Speed rpm	Temperature °C
				Prewash	Main Wash	Softener	Start delay Départ différé	Easy Ironing Anti-froissage	Special 7 kg Spécial 7 kg	Prewash Pré-lavage	Intensive Rinse Rinçage plus		
Cotton (Anti-bacterial) Coton		Normally to heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton, coloured cotton and linen. For temperature selection, please respect the manufacturer's recommendation on the care label. At a temperature of 80°C or more, this programme eliminates bacteria, ensuring sanitization of your laundry. The bacteria removal efficiency has been tested following a similar methodology to the NF EN 13697 standard of Nov. 2001. <i>With heavily soiled laundry the additional "Prewash" option can be selected as well.</i>	6.0	*	Yes	*	*	*	*	*	*	1400	20 to 95
Synthetics Synthétique		Normally to heavily soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	2.5	*	Yes	*	—	*	—	*	*	1000 ¹⁾	20 to 60
Daily load magic 40°		Slightly to normally soiled textiles made of cotton and/or synthetics.	3.0	—	Yes	*	—	*	—	*	*	1400	30 to 60
Quick wash 30 min Chrono 30°		Shortly worn outer clothing made of cotton, polyester, polyamide and blends with cotton.	3.0	—	Yes	*	—	*	—	*	*	1400	20 to 30
Delicate Délicat		Curtains and delicate clothing, dresses skirts, shirts and blouses.	1.5	*	Yes	*	—	—	*	—	*	1000 ¹⁾	20 to 40
Wool Laine		Only woollens with a felt-free finish, labelled with the woolmark and identified as machine washable. This programme (40°C) is tested and approved by The Woolmark Company for machine washable wool. <i>If you select "Rinse Hold" do not leave items to soak for too long.</i>	1.0	—	Yes	*	—	—	—	—	*	1000 ¹⁾	20 to 40
Handwash Lavage main		Textiles made of silk, linen, wool and viscose marked as "handwashable". This programme (40°C) is tested and approved by The Woolmark Company for handwashable wool. <i>If you select "Rinse Hold" do not leave items to soak for too long. A very gentle spin is used in this programme.</i>	1.0	—	Yes	*	—	—	—	—	*	400 ²⁾	20 to 40
Rinse & Spin Rinçage & Essorage	—	Same as the last rinse and the final spin in the "Cotton" programme.	6.0	—	—	*	—	*	—	*	*	1400	—
Spin Essorage	—	In this programme spinning is intensive. Same as the spin cycle in the "Cotton" programme.	6.0	—	—	—	—	—	—	—	—	1400	—
Short spin Essorage doux	—	In this programme spinning is gentle. Same as the spin cycle in the "Wool" programme.	1.5	—	—	—	—	—	—	—	—	1000 ¹⁾	—
Reset / Drain Annulation / Vidange	—	Drain only - no spinning. Alternative method of terminating programme after "Rinse Hold".	—	—	—	—	—	—	—	—	—	—	—

* optional / Yes : dosing required
1) For improved garment care spin speed is restricted to 1000 rpm in this programme.
2) For improved garment care spin speed is restricted to 400 rpm in this programme.

CONSUMPTION DATA

Programme	Temperature Selector (°C)	Load (kg)	Water (l)	Energy (kWh)	Approx. Programme Duration (hours : minutes)*
Cotton (Anti-bacterial)	95	6.0	54**	1.90	2:00
Cotton	60	6.0	49	1.14	2:20
Cotton with "Special 7 kg" ***	60	7.0	57	1.33	2:35
Cotton	40	5.0	44	0.60	2:05
Synthetics	60	2.5	55	0.80	1:30
Synthetics	40	2.5	55	0.60	1:20
Daily load	40	3.0	45	0.50	1:00
Quick wash	30	3.0	37	0.40	0:30
Delicate	30	1.5	60	0.50	0:45
Wool	30	1.0	60	0.30	0:40
Handwash	30	1.0	45	0.30	0:40

Prewash cycle might increase programme duration. Consumption values were measured in normalized conditions in compliance with Standard IEC / EN 60 456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash.

 
* The remaining time indicator can similarly deviate from the values in the table, because it takes into account the household conditions applicable at that time. When the remaining programme duration is newly calculated, the 6th sense symbol appears on the display.

** To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

*** Reference programme for the energy label.

ADD DETERGENTS, CLOSE THE DOOR AND SELECT THE PROGRAMME

Add the detergents as described in the programme table or in the chapter "Detergents and Additives" in your Instructions for Use booklet.

1. Switch on the machine by pressing the "On/Off"-button.
2. The blue indication lights of the main programmes and of the "Reset/Drain" button light up.
3. Select the desired programme by pressing the corresponding button. The blue lamps of the other programmes go out, and the lamp of the "Start/Pause" button flashes. The display shows the predefined spin speed and temperature corresponding to the selected programme.
4. The temperature can be altered by pressing the temperature selection buttons "+"/"-", the spin speed by pressing the spin speed selection button . If spin speed "0" is selected, the final spinning is cancelled, but intermediate spin peaks remain during rinse; the water is drained out only.

USING CHLORINE BLEACH

- Wash your laundry in the desired programme (Cotton, Synthetics), adding an appropriate amount of chlorine bleach to the SOFTENER chamber (close the detergent dispenser carefully).
- Immediately after end of programme, start the "Rinse and Spin" programme to eliminate any residual bleach smell; if you want, you can add softener.

SELECT SPECIAL OPTIONS

Selecting any special option the indication lights up. When the combination of programme, additional options and temperature is not possible, the indication lights switch off automatically. Unsuitable combinations of options are deselected automatically.

"Special 7 kg" button

- Allows you, in the "Cotton" programme, to effectively wash loads up to 7 kg with minimal water usage and energy consumption.

"Easy Ironing" button

- Can be used together with "Cotton", "Synthetics" and "Daily" programmes to make ironing easier.
- Increases the water quantity and the clothes are spun very soft.

"Prewash" button

- Only for heavily soiled loads (for example sand, granular dirt) sensible. The cycle time increases approximately 15 min.

"Intensive Rinse" button

- More water and a longer time in rinse cycle is added.
- This option is particularly suitable for areas with very soft water, washing baby linen and helps people with allergies.

"Rinse Hold" button

- The laundry remains in the last rinse water without progressing to the final spin cycle to avoid creasing and prevent colours from changing.

- This option is particularly recommended for the programme "Synthetics", "Daily" and "Delicates".
- This function is particularly useful if you want to postpone spinning to a later time, or if you want to drain only.

Note: The programme stops to "Rinse Hold" at the time the "Rinse Hold" symbol is indicated on the display. The "Start/Pause" button flashes.

Terminate the "Rinse Hold" option:


- Press the "Start/Pause" button; the programme will terminate automatically with the final spin cycle for the present wash programme.
- If you do not wish to spin the clothes, press the "Reset/Drain" button and afterwards the "Start/Pause" button to start the "Drain" programme.

FAVOURITES

You have the possibility to store, for each main programme, your preferred combination of programme, options, temperature and spin speed. After having selected the desired combination, press the "Favourites" button for at least 3 sec. Next time you choose the corresponding programme, the display will show you the stored parameters, and you just have to press "Start/Pause". If you want to change the stored combination, just make your new choice and again press the "Favourites" button for at least 3 sec. The previous combination is cancelled automatically, and the new one is stored.

START DELAY

The "Start Delay" allows to run the machine at the consumer's convenience, for example at night when electricity is cheaper.

- Select programme, temperature, spin speed and options.
- Press the "Start Delay" button  to select the delay time by 1 to 23 hours. The selected start delay is indicated on the display under "Remaining Time".
- Press the "Start/Pause" button - the countdown of the selected start delay begins.
- The start delay indication disappears when the programme starts and is replaced by the remaining time.
- The number of hours can be modified later by pressing the "Start Delay" button again.

To cancel the "Start Delay"

- Press the "Reset/Drain" button for at least 3 seconds - the start delay time disappears from the remaining time indication.

PROGRAMME START

Open the tap and press the "Start/Pause" button. The blue lamp under the "Start/Pause" button stops flashing and lights up. The display indicates the sequence reached in the programme by the corresponding symbol. When the programme sequence is finished, the corresponding symbol disappears. Under "Remaining Time", the display indicates the remaining programme duration.

BLUE "DOOR LOCKED" INDICATION

As long as a washing programme is running, the lamp lights up to show that the door cannot be opened. When the indication goes off, the door can be opened again.

RED INDICATIONS

"Clean filter"

Waste water is not pumped out. Check whether the drain hose is kinked or the filter must be cleaned; in the latter case refer to the Instructions for Use ("Removing the Filter").

"Water tap closed"

The appliance has no or insufficient water supply. Open the water tap; if the indication still lights up, refer to the "Troubleshooting Guide" in the Instructions for Use.

PROGRAMME END

- On the display, the "Remaining time" disappears and "End" is indicated.
1. Switch the machine off by pressing the "On/Off"-button.
 2. Close the water tap.
 3. Open the door and unload the machine.
 4. Leave the door ajar to allow the drum to dry out.

CHANGE THE PROGRAMME, TEMPERATURE, OPTIONS AFTER PROGRAMME START

1. Press the "Start/Pause" button to pause the programme. The light flashes.
2. Select the new programme (with temperature), any options and another spin speed if you want.
3. Press the "Start/Pause" button again. The new programme continues at the same position where the previous programme was interrupted. Do not add detergent for this programme.

CANCEL (RESET) A RUNNING PROGRAMME BEFORE THE END

- Press the "Reset/Drain" button for at least 3 seconds. Any existing water is drained out before the door can be opened.