

Nu:Tekt


NTS-1 digital kit

PROGRAMMABLE SYNTHESIZER KIT


How to calibrate the ribbon keyboard

If there are any discrepancies between the keys you play and the actual pitches that sound, you should calibrate the ribbon keyboard response.


1. While holding down the REVERB button, turn on the power.
2. Turn the TYPE knob until "CAL" is shown in the display.
3. Press the OSC button. "CAL.1" will appear in the display.
Press the region between B and C on the left side of the ribbon keyboard, and release your finger when "128" is shown in the display.

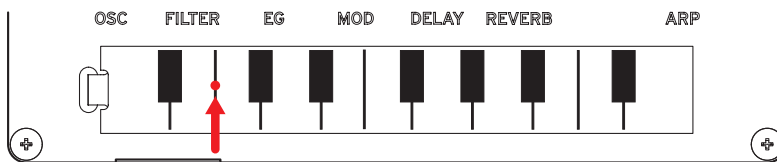

4. Press the FILTER button. "CAL.2" will appear in the display.
Press the region between E and F on the ribbon keyboard, and release your finger when "128" is shown in the display.

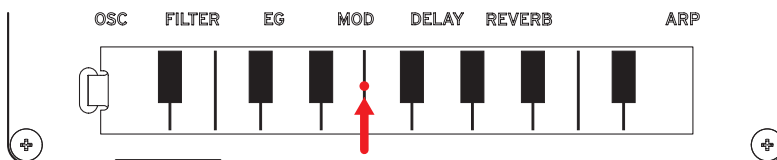

5. Press the EG button. "CAL.3" will appear in the display.
Press the region between B and C on the right side of the ribbon keyboard, and release your finger when "128" is shown in the display.

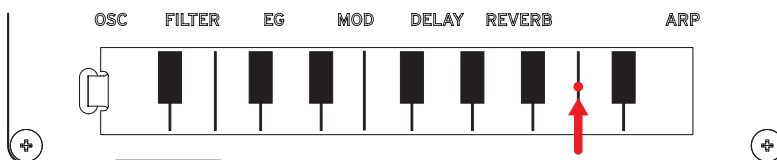

6. When the ARP button is pressed, the settings will be saved and the NTS-1 digital kit will restart.
Press the REVERB button to cancel.