


Operator 1-6 /All

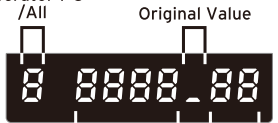


Original Value


Parameter

Parameter Value

EG / Pitch EG

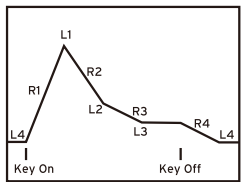

Level Scale

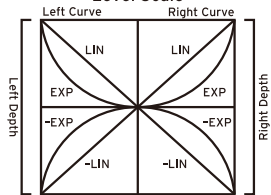

<b>0n</b>	Operator On/Off	00	OFF
		01	ON
<b>EGr1</b>	EG Rate 1	00-99	
<b>EGr2</b>	EG Rate 2	00-99	
<b>EGr3</b>	EG Rate 3	00-99	
<b>EGr4</b>	EG Rate 4	00-99	
<b>EGL1</b>	EG Level 1	00-99	
<b>EGL2</b>	EG Level 2	00-99	
<b>EGL3</b>	EG Level 3	00-99	
<b>EGL4</b>	EG Level 4	00-99	
<b>LSbP</b>	Level Scale Break Point	00-99	
<b>LSLd</b>	Level Scale Left Depth	00-99	
<b>LSrd</b>	Level Scale Right Depth	00-99	
<b>LSLC</b>	Level Scale Left Curve	00	-LIN
		01	-EXP

<b>LSLC</b>	Level Scale Left Curve	02	EXP
		03	LIN
<b>LSrC</b>	Level Scale Right Curve	00	-LIN
		01	-EXP
		02	EXP
		03	LIN
<b>OrS</b>	OSC Rate Scale	00-07	
<b>Ans</b>	Amp Mod Sense	00-03	
<b>KVS</b>	Key Velocity Sense	00-07	
<b>OLVL</b>	Output Level	00-99	
<b>OSCA</b>	OSC Mode	00	RATIO
		01	FIXED
<b>FrEC</b>	Freq Coarse	00-31	
<b>FrEF</b>	Freq Fine	00-99	
<b>dEtU</b>	Detune	00-14	

<b>PtR1</b>	Pitch Rate 1	00-99	
<b>PtR2</b>	Pitch Rate 2	00-99	
<b>PtR3</b>	Pitch Rate 3	00-99	
<b>PtR4</b>	Pitch Rate 4	00-99	
<b>PtL1</b>	Pitch Level 1	00-99	
<b>PtL2</b>	Pitch Level 2	00-99	
<b>PtL3</b>	Pitch Level 3	00-99	
<b>PtL4</b>	Pitch Level 4	00-99	
<b>Fdbk</b>	Feedback	00-07	
<b>OS</b>	OSC Key Sync	00	OFF
		01	ON
<b>LFOd</b>	LFO Delay	00-99	
<b>LAmD</b>	LFO Amp Mod Depth	00-99	
<b>LFOK</b>	LFO Key Sync	00	OFF
		01	ON
<b>LFOW</b>	LFO Wave	00	TRIANGLE
		01	SAW DOWN
		02	SAW UP
		03	SQUARE
		04	SINE
		05	S-HOLD
<b>NSP</b>	Mod Sense Pitch	00-07	
<b>trSP</b>	Transpose	00-48	

# Algorithm



Modulator Knob



Carrier Knob

# KORG

volca fm  
DIGITAL FM SYNTHESIZER

